




## candy2o over Quicksilver Chrome

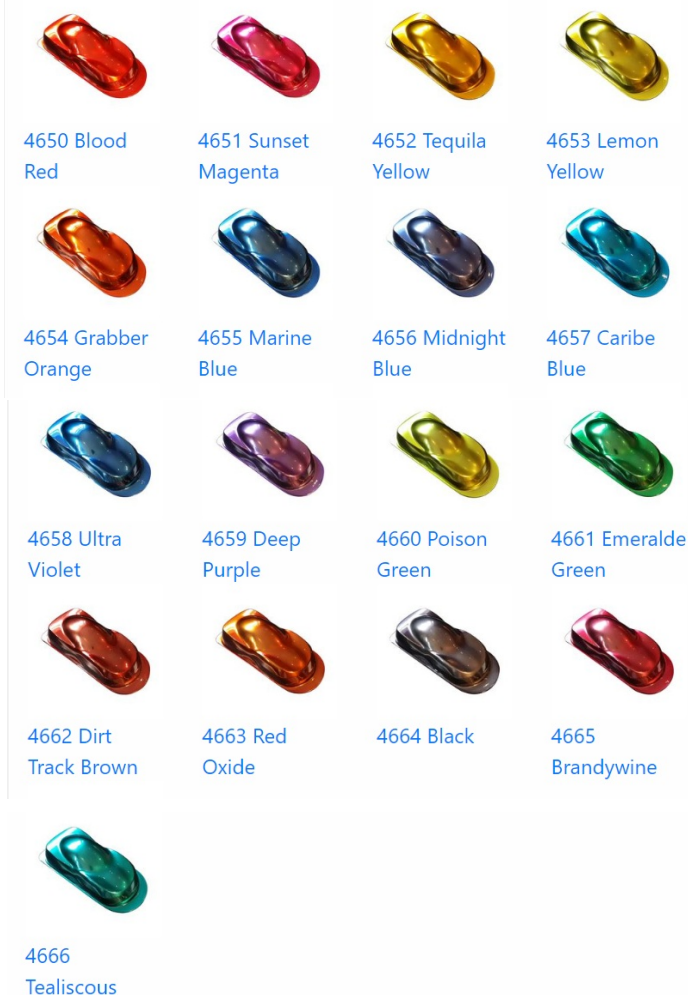

candy2o applied over Quicksilver Chrome creates deep, rich anodized candy colors. Mix candy2o 1:1 4030 Balancing Clear and apply over 4104 Quicksilver, under which 4258 Gloss Black is applied for a reflective base.

Available from:  
**Dixie Art Airbrush**  
[www.dixieart.com](http://www.dixieart.com)  
 800-783-2612 – 504-836-0069



## candy2o mixed with Quicksilver Chrome



Mix candy2o with Quicksilver Chrome for a unique anodized chrome color which sprays like a semi-opaque in that a color ceiling is achieved after 3 – 4 coats making candy & chrome mix colors forgiving when spray-pattern is not exact, unlike traditional candy paintjobs.

Mix candy2o 1 : 1 4103 Quicksilver Chrome : 1 4040 Bleed Checker. (All equal parts in mix; use of 4012 not required). Apply over base of AutoBorne Sealer 6001 White or 6003 Grey.