

iwata
Silver Jet

High Performance, Low Pressure Airbrush Compressor

**IS 50 IWATA SILVER JET
OPERATING INSTRUCTION MANUAL**

NEED ASSISTANCE?

If you have any issues with this product,
call **ANEST IWATA-MEDEA (U.S.A.)**
503-253-7308 (M-F 8AM-4:30PM Pacific Time)
or your local Anest iwata affiliate
before returning to your place of purchase.

ANEST IWATA-MEDEA, INC.

Portland, Oregon U.S.A.
+1-503-253-7308
www.lwata-medea.com

ANEST IWATA CORPORATION

Yokohama, Japan
+81-(0)45-591-1111
www.anest-iwata.co.jp

ANEST IWATA AUSTRALIA PTY LTD.

Mt. Druitt, NSW
+61-(02)-9853-2000
www.anest-iwata.com.au

ANEST IWATA SOUTH-EAST ASIA CO., LTD.

Bangkok, Thailand
+66-(0)-2643-2870
www.anest-iwatasoutheastasia.com

ANEST IWATA EUROPE S.R.L.

Torino, Italy
+39-01-1248-0868
www.anest-iwataeu.com

ANEST IWATA (U.K.) LTD.

Neots Cambs, England
+44-(0)1480-474742
www.anest-iwata.co.jp

ANEST IWATA DO BRASIL COMERCIAL LTDA.

Bairro do Paraiso, Sao Paulo
+55-11-3171-0072
www.anest-iwata.net.br

ANEST IWATA SHANGHAI

Shanghai, China
+86-(0)21-6407-9713 / 15 / 16
www.anest-iwata-sh.com/ja

ANEST IWATA MOTHERSON LTD.

Uttar Pradesh, India
+91-(0)120-4600500 / 14 / 17
www.motherson.com

ANEST IWATA SOUTH AFRICA (PTY) LTD.

Johannesburg, Republic of South Africa
+27-11-463-2169/2265/2223

ANEST IWATA RUS LLC

Moscow, Russia
+7-495-938-77-28
www.anestiwata.ru


CENTURY TRADING CO., LTD.

Seoul, Korea
82-2-2163-0300
www.centradng.co.kr

ASSEMBLY INSTRUCTIONS

Unpack the compressor and all components:

- Iwata Silver Jet Airbrush Compressor (IS 50)
- Iwata Cobra Coil Airhose
- Airhose Adapters (for use with Badger, Aztec and Paasche airbrushes)
- Iwata Silver Jet Operating Instruction Manual

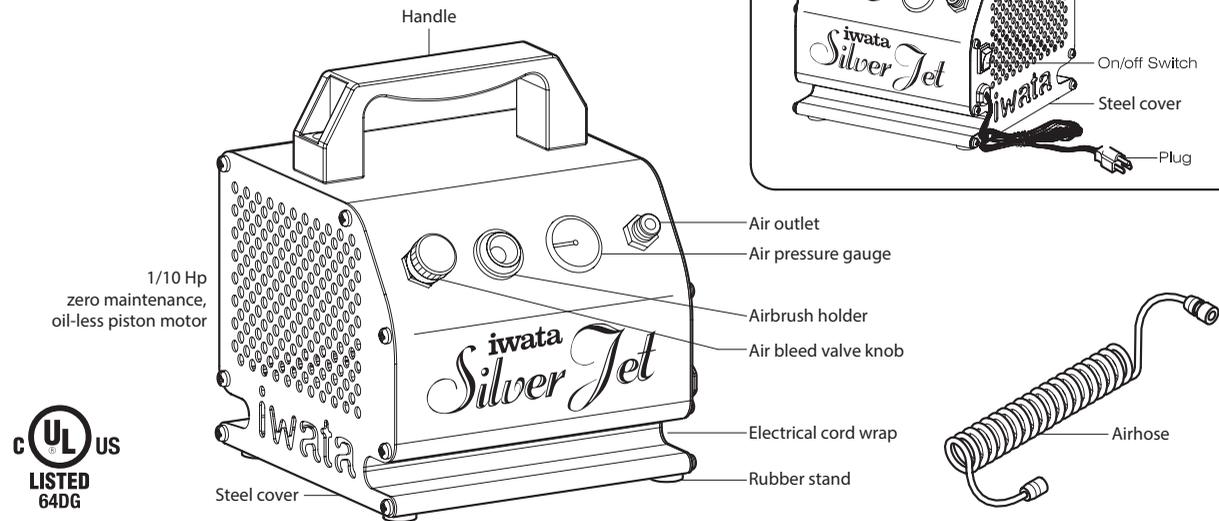

VOLTAGE CAUTION - READ CAREFULLY

If you bought the compressor in the country you're going to use it, it's completely ready-to-go. If you're going to transfer the compressor to another country with a different voltage, you'll need a plug adapter and the appropriate power converter. These items typically are found at hardware stores or electronic stores. Using compressors with the wrong voltage adapters and converters can damage the compressor or result in an electrical fire.

GETTING STARTED

1. Screw the airhose onto the airbrush.
 - a. If you're using a brand of airbrush other than Iwata, use the appropriate adapter.
2. Screw the airhose onto the compressor.
 - a. Other brands of airbrush hoses will fit the compressor. (Compressor has standard 1/4" threads.)
3. Press down on the airbrush trigger before turning on the unit.
4. Plug the unit into a grounded wall outlet. Avoid using an extension cord.
5. Turn ON the unit by pressing the on/off switch. Adjust the air pressure by turning the air bleed valve knob. Turn knob toward "+" to increase pressure and toward "-" to decrease pressure.
6. When not using your airbrush, place the front of the airbrush into the holder. If using a bottle-feed airbrush, put the back end of the airbrush into the holder.

NOTE ON MOISTURE: When unit gets warm from extended use, it can spit out moisture. To prevent this, use the Iwata Pistol-Grip Moisture Filter (F A450) which is sold separately.

ENDING A SESSION

1. Turn off the compressor.
2. Release any leftover air by pressing down on your airbrush trigger (being careful of any excess paint) or unscrewing your airbrush from the airhose.
3. When storing your Iwata Silver Jet, you can use the electrical cord wrap feature around the base of the unit.

WARRANTY

All Iwata compressors are *Warranted* against all manufacturing defects of material and manufacture or workmanship for a period of ONE year from the date of purchase*. Any part or material that is or becomes defective so as not to be usable within this period will be repaired or replaced. This warranty does not cover damage caused by negligence or a compressor that has been altered or abused in any way.

Call or email Anest Iwata-Medea before returning a compressor for the appropriate procedure for warranty repairs. Any material that is shipped to Anest Iwata-Medea without prior authorization will not be accepted.

- Anest Iwata-Medea offers technical support over the phone at no charge. **Call Customer Care at 503-253-7308 Monday – Friday, 8am – 4:30pm Pacific Time.** Telephone support includes general usage information, cleaning tips, and troubleshooting.
- **NOTE:** All compressors returned for repair must have a Return Authorization Number. **Please call 503-253-7308 to obtain an RA number,** instructions and shipping address.

Warranty service will be provided only at authorized Anest Iwata-Medea service centers. You must pay all charges for shipping/transporting your Iwata compressor to/from these service facilities.

Anest Iwata-Medea, Inc. will not be responsible for damage to persons or property, commercial loss or any other incidental or consequential damage caused by a defective compressor. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

All implied warranties, including any warranty of merchantability or fitness are limited to the duration of this written warranty. However, some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

** Please keep the sales receipt.*

Genuine Iwata

iwata

by **ANEST IWATA**

WWW.IWATA-AIRBRUSH.COM